



WARNING! These controllers use high voltage. Handle with care. Failure to correctly handle or install this lighting product can result in fire, electrocution, and death. All connections must be sealed when used outdoors or in damp locations. The following instructions are suggested installation procedures only. Brilliant Brand Lighting assumes no liability for problems, damages, injuries, or expenses that may occur from misuse, mishandling, improper installation, or product failure. These instructions do not constitute professional installation and may not meet electrical requirements in your state. If you are uncomfortable with any of these procedures, please contact a licensed electrical contractor.

120V SOUND CHIP CONTROLLER INSTRUCTIONS

CNTRLS-R2CMAX - Double Recpticle 7-Function Flashing Lighting Controller With Sound Chip

MARNING! This controller is rated for indoor use only.

CNTRLS-R2CMAX Button Guide:

- 1: ON / OFF Button use to turn controller on or off
- 2: Indicator Lights lights indicate operation on A channel, B channel or both channels
- 3: Sound Port opening to let noise reach the controller sound activation chip
- 4: Chase Mode Knob use to select the desired effect setting
 - 1-5: Flashing Effects (some effects may only be compatible with chasing lights)
 - 6: Sound Activation Mode
 - 7: Steady Burn Mode (lights will be on continuously)
- 5: Speed Knob: use to adjust the speed on the selected effect
- 6: Sound Knob: use to adjust the sensitivity for the sound activation chip





CNTRLS-R2CMAX Back Features:

1: 2x 2-Prong Polarized Recepticles

2: Fuses - 1x 8A/250V fuse installed + 2x spares

3: Grounded Power Cord - 3ft long