

# LED Neon 4-Wire 120V RGB Color Changing Rope Light Mini Controller with Wireless Remote



## 120V RGB LED IR Controller Remote Guide (SNRL-RGBMCNTRL)

### ON/OFF Buttons:

Use to turn the controller on or off. Controller will start on last setting selected.



**UpSun Button:**

Use to increase single color brightness; increase effect speed.



**DownSun Button:**

Use to decrease single color brightness; decrease effect speed.

### 7 Pre-Set Color Buttons:

Use to quickly select a pre-set color from the top or bottom row: (top row) Red, Green, Blue, White, or (bottom row) Yellow, Cyan, Pink. The brightness setting of each color can be adjusted up or down (see [UpSun](#) and [DownSun](#) button instructions). The middle 9 buttons are pre-set brightness buttons for the bottom row colors with the top button being 25% brightness, middle button 50% brightness, and the bottom button 75% brightness.

### Effect Buttons:

**FLASH:** Jumps between 7 pre-set colors: Red, Green, Blue, Yellow, Cyan, Purple, and White. Use the [UpSun](#) or [DownSun](#) buttons to speed up or slow down effect speed.

**STROBE:** Seamlessly fades between all colors creating a rainbow color change effect. Use the [UpSun](#) or [DownSun](#) to speed up or slow down effect speed.

**FADE:** Flashing Pink.

Use the [UpSun](#) or [DownSun](#) buttons to speed up or slow down effect speed.

**SMOOTH:** Jumps between 3 pre-set colors - Red, Green, and Blue.

Use the [UpSun](#) or [DownSun](#) buttons to speed up or slow down effect speed.

