Birddog Lighting

# **UFO Series Highbay**

Product Appearance

90° PC Lens

Product Features

◉ Innovative & unique structure and design.

◉ Die-casting radiator with excellent heat dissipation, overall pow-
der-coated and through 2000hrs' salt spray testing.

◉ With high transmittance of PC lens, PC cover and glass to take the dif-
ferent light distribution optional.

◉ Adopting 4mm toughened glass, no need external protective cover,
high strength and high transmittance over 93%.

◉ Using the appropriative water-proof connector and silicone ring to seal,
protecting level reaching IP65, suitable for different kinds of outdoor
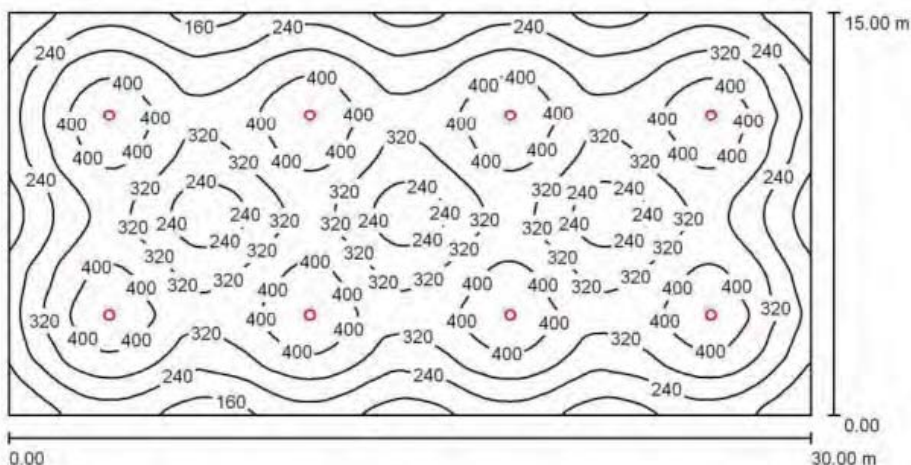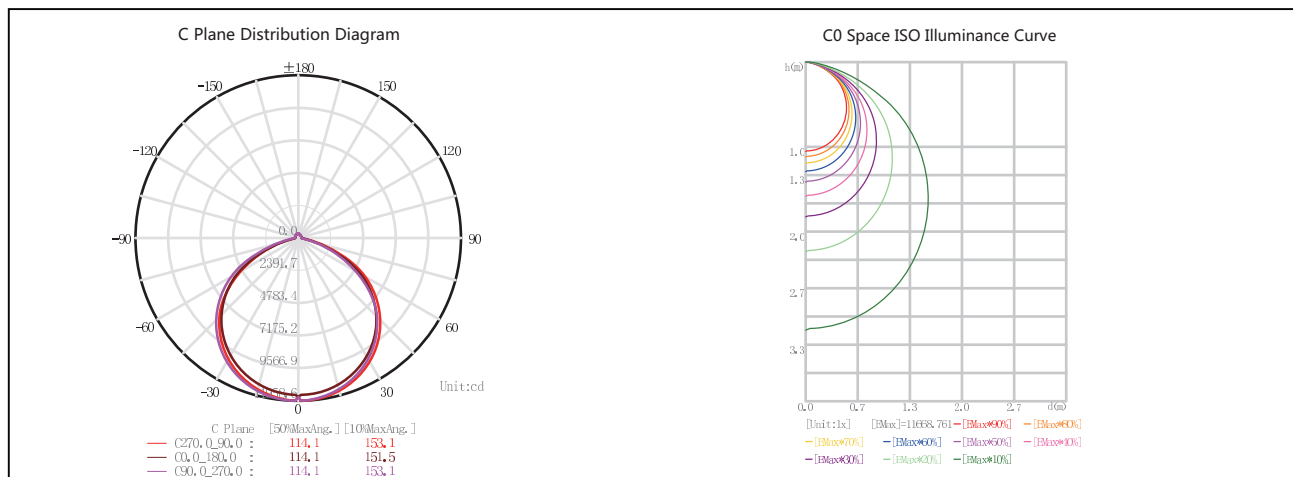harsh working environment.

Product Dimension
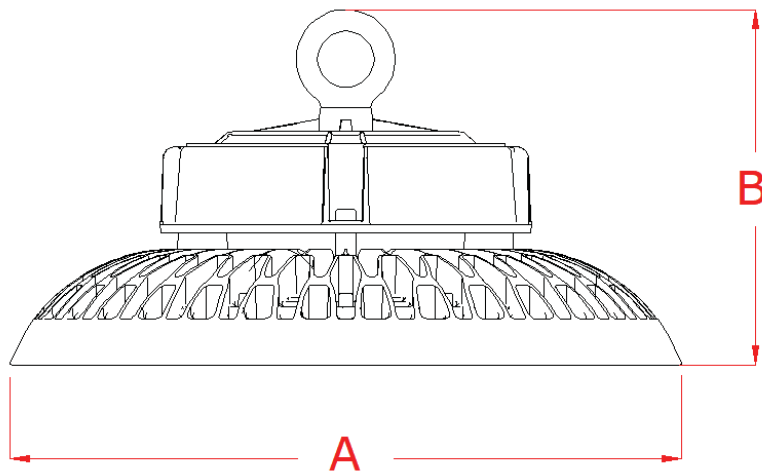
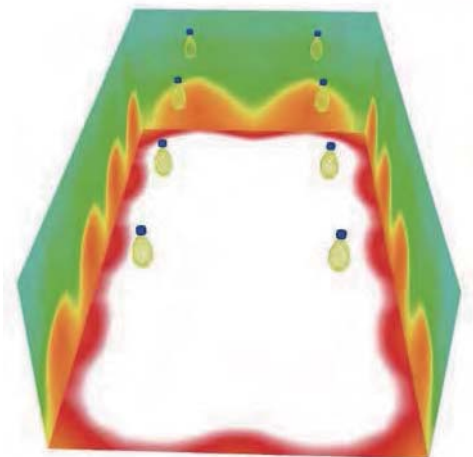| Part NO.	UHBG160-5KM
A (inch)(mm)	(13.39″)Φ340
B (inch)(mm)	(7.13″)181

Specification

Part No.	Power	Input Voltage	IP Rating	Input Current	PF	Light Efficacy	CCT
UHBG160-5KM	160W	AC100-277V	IP 65	1.6A	>0.9	150lm/w	5000K

Testing Report

LUMINOUS INTENSITY DISTRIBUTION DIAGRAM

Line graph

Thermal Imaging
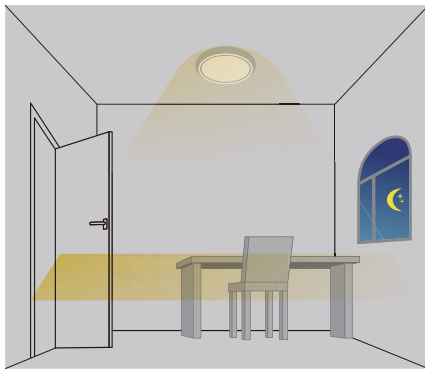
Function of each cap

A: ◉ Normal water proof cap

1:Just waterproof

B: ◉ Photocell sensor cap

1:Preset a lux value to detect the ambient light level. (Before shipping from the factory, the lux value can be set in advance)

2:Preset lux value with a remote controller (Customer can set the lux value with a remotor)

Lights on when ambient light level is lower than preset lux value.

Lights off when ambient light level is higher than preset lux value.

◉ Customer can set it according to actual needs with a remote.

ON/OFF — Press the "On/off" button, the light keeps permanently on or off.Press "Auto Mode", "Reset" or "Apply" buttons to quit from this mode.

Auto Mode — Press "Auto Mode" button, the sensor starts to work and all settings remain same before the light gets switched on/off.

Reset — 1.Press "Reset" button, change brightness to max level.
2.Press "Reset" button, products with DIP switch will be controlled by DIP; otherwise all the setting will be just initial, that is 100% detection range,hold time 5S, no stand-by time,daylight threshold disabled.

Flick after press any button

Flick only after press "Apply" button

+/- — 1. To adjust brightness 10-100% in on/off mode.
2. To adjust highest brightenss 60-100% in sensor mode.

Start — Press "Start" to customize scene, users can change detection range, daylight threshold, holdtime, standby dimming level and standby period.

Memory — 1. Press "Memory" to save all the settings.
2. The settings remained as the last time if not get resetted values.

Apply — 1. Press "Apply" to deliver the saved setting.
2. Press "Apply" without "memory" will make all the setting one-time operate
3. Settings should be done within 30S, otherwise it exits memory mode.

Detection area — Press to define detection area 100%/75%/50%/25%.

Hold time — Press to define holdtime 5s/30s/1min/3min /5min/10min/20min/30min .

Stand-by dimming level — Press to define stand-by dimming level 10%/20%/30%/50%.

Stand-by period — Press to define stand-by period 0s/10s/30s/1min /5min/10min/30min/+∞.
Note: "0s" means no standby period; "+∞" means unlimited standby period.

Daylight threshold — Press to define daylight level 2Lux /10Lux /30Lux/50Lux/80Lux/120Lux/Disable/Di
Note: Disable means light will be turned on once sensor detects movement, regardless of ambient lux.

Test (2s) — The button "Test (2s)" is for testing purpose after commissioning.Pressing button, the sensor goes to test mode (hold time is only 2s)

◉ Detection Patterns

Ceiling Mounted

10m
38.2ft

10m
38.2ft
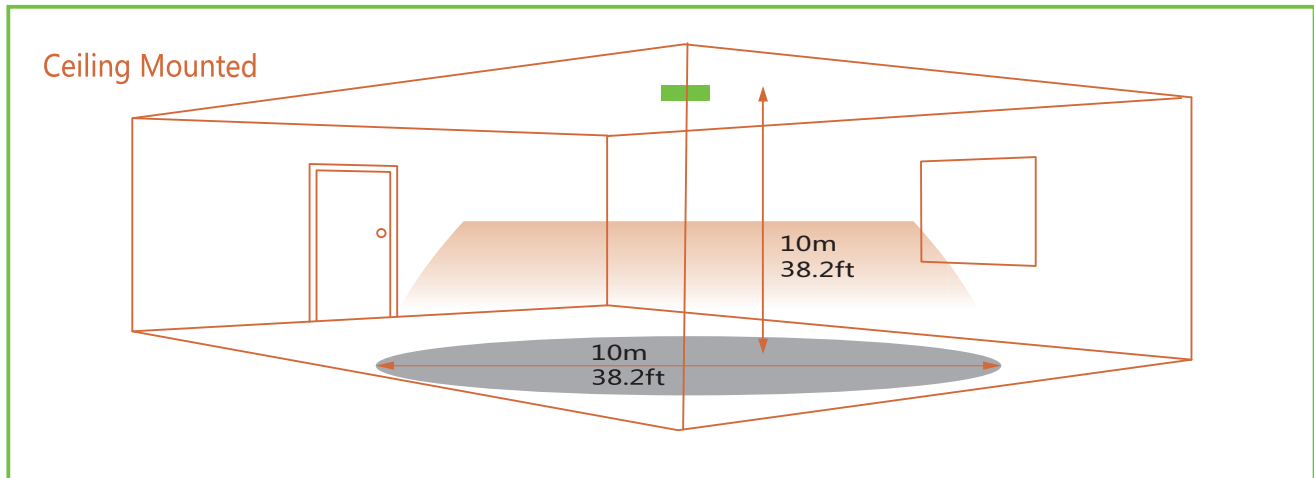
◉ Technical data

Operating voltage	10-15VDC
Operating current	20mA±5%
Output	DIM0-10V
Stand-by power	<0.5W
Detection area	20%/50%/75%/100%
Hold time	2s/30s/2min//5min/15min/30min
Daylight threshold	5Lux/25Lux/50Lux/100Lux/300Lux//600Lux Disable
Stand-by period	10s/15min/30min/+∞
Stand-by dimming level	10%/20%/50%
Microwave frequency	5.8GHz±75MHz
Microwave power	<0.3mW
Mounting height	Max.10m/38.2ft
Detection range	Max.10m/38.2ft
Operating temperature	-20℃~+60℃

◉ Lux on/off

Adopted dual PD technology, it is able to differentiate artificial light brightness from natural light after installed inside the fixture,and automatically turn off light when ambient brightness exceeds preset lux level.
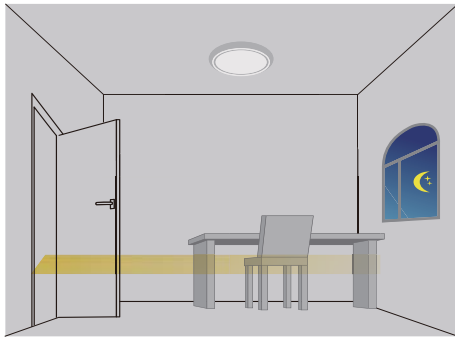
Preconditions to use the Lux-off function:

1. Standby period is +∞;

2. Standby dimming level is on 10%, or 50%;

3. Daylight threshold is on 30Lux, 50Lux, 80Lux or 100Lux.

Natural light

Lux off
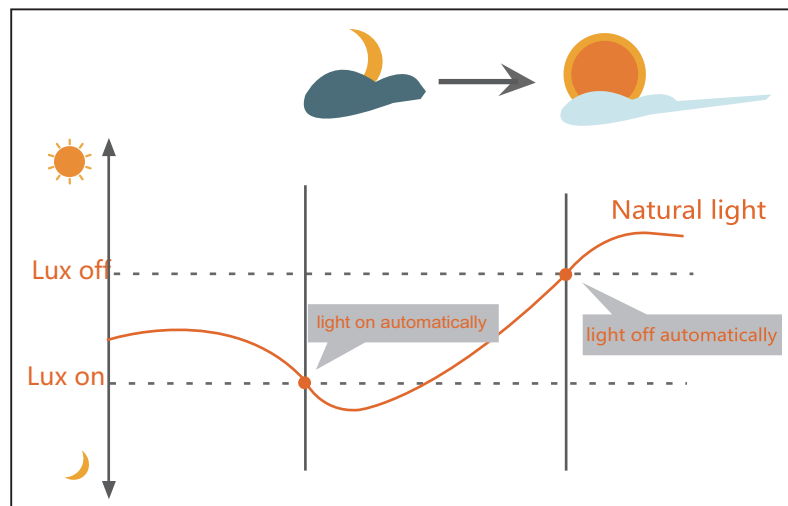
Lux on
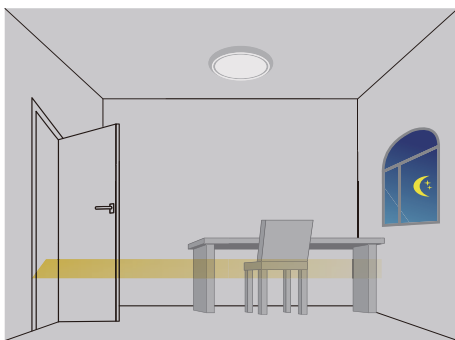
light on automatically

light off automatically

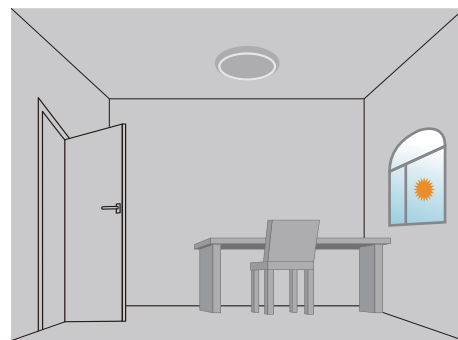## Application——Lux on/off

Light automatically on when ambient brightness is lower than preset lux level.

With insufficient ambient brightness, light dims to 100% when motion detected.
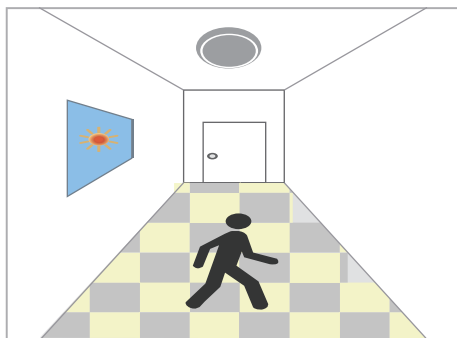

Light dims to standby level if no motion detected after holdtime.

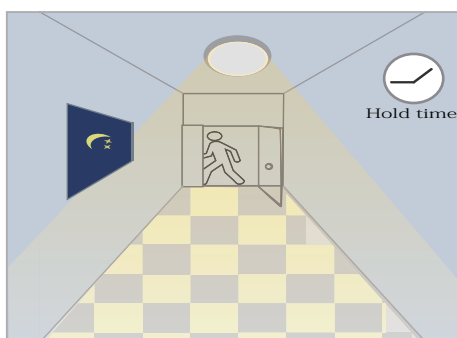Light off when ambient lux level is higher than preset lux amount.
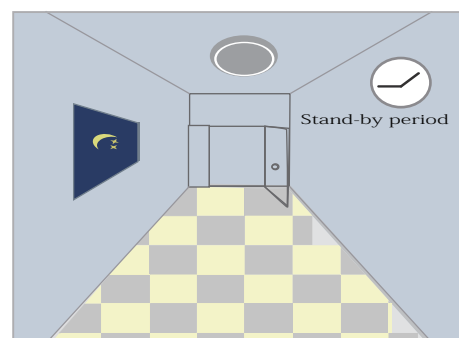
Application——Dimmable control/Corridor function

With sufficient daylight, even when motion detected, light remains OFF. After the stand-by period, light OFF.After last detection, the light will be

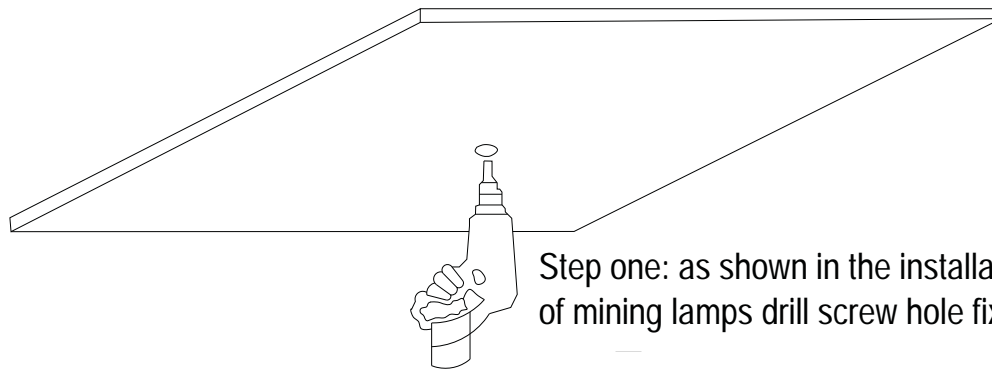With insufficient daylight, when motion detected, light ON.

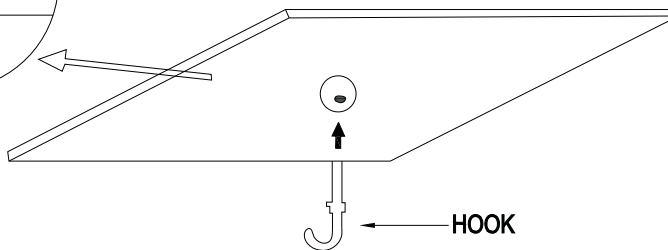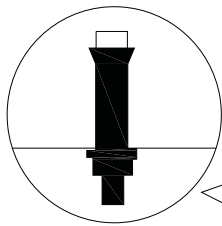dimmed down to the stand-by dimming level(10%,20%,30% or 50%) after holdtime.

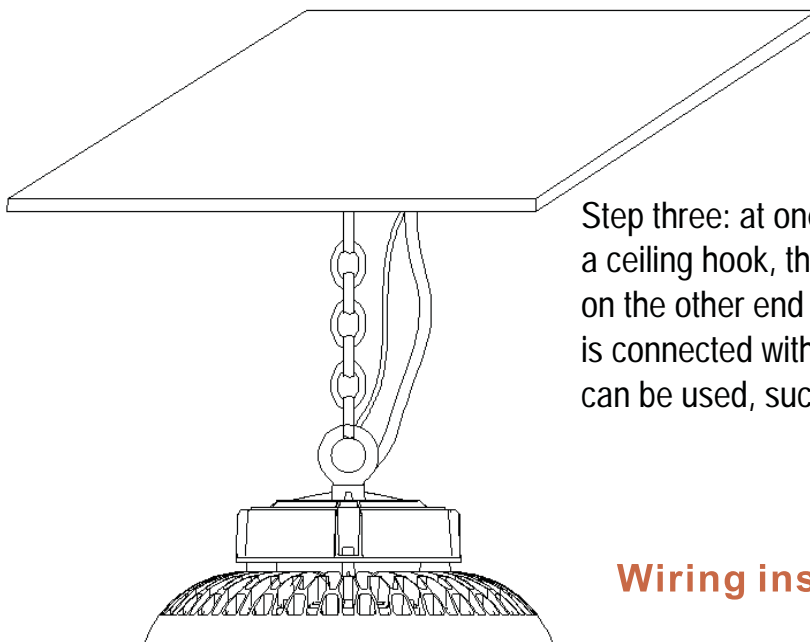Light dims to standby level if no motion detected after holdtime.

Installation

Step one: as shown in the installation position
of mining lamps drill screw hole fixed the chain a good.

HOOK

Step two: then in the drill hole position will hook
is fixed at the drill hole position. (pictured above)

Step three: at one end of the chain placement in
a ceiling hook, then the UFO lamp hook and chain
on the other end of the hook and good,
is connected with the commercial power
can be used, such as above shown.

Wiring instruction

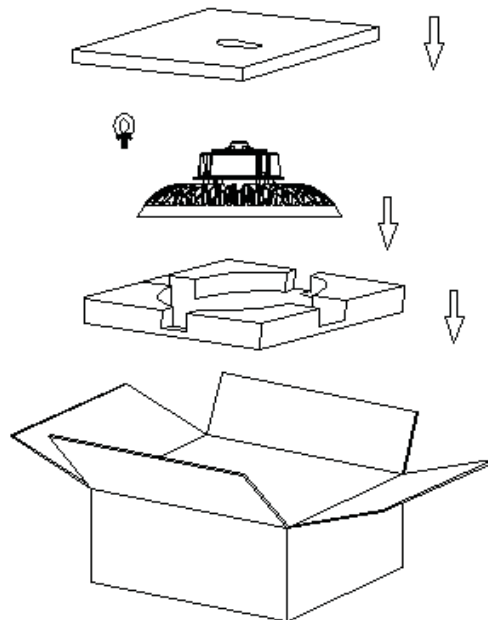light fixture

AC L(Black)
AC ⏚(Green)
AC N(White)

AC power connect
(AC100-277V)

Packing /weight

Part NO.	Outer Carton Size (LxWxH)	Qty/Carton (pcs)	Net weight (kg)(lbs)	Gross weight (kg)(lbs)	20GP (QTY)	40HQ (QTY)
UHBG160-5KM	380*380*175mm	1PCS	3.3Kg 7.26 lbs	4.30Kg 9.46lbs	1071PCS	2535PCS

Packing

UFO Series Highbay

Note

1.The installation and maintenance must be completed by electricians or professionals.

2.Please cut off the power before installation and maintenance.

3.The fixture is not allowed to be covered by thermally insulating material.

4. Please keep away from the corrosive substance,and keep the fixture dry and clean.

5. Working temperature:-4°F~104°F, storage temperature:-22°F~140°F.